

FLASHER OUTPUT CODES

The FLASHER output is used not only during battle but can give you additional card status signals (if the option is selected).

Enabling the extended signals

As described in the IBU2 manual (page 9, chapter 3.4) by setting to ON the dip-switch n°5 the extended signals codes will be enabled.

This function will show, using the FLASHER output, the tank status and warnings.



one blink = inertia and smoke generator is turned on/off



two blinks = low battery warning



three blinks = motors overcurrent warning



four blinks = missing radio signal



five blink = overtemperature